PMID700: User Manual size:90%

9/19/2011

Polaroid

7" Internet Tablet
With 8 GB Internal Memory

User Manual

In the box

Tablet

User Manual

Headphones

USB Cable

AC Adapter

USB Stick Adapter

Location of controls

1. Power on/off
2. Volume control button
3. [HOME] button
4. [Previous] button
5. [MENU] button
6. 7" TOUCH screen
7. Headphone jack
8. SD card slot
9. USB port
10. Speaker
11. AC adapter jack
12. Microphone hole on the bottom
13. RESET hole on the back

Home screen button: Press to go back to the Home screen

Press this area

Press this area

Press this area

Previous screen: Go back to the previous screen.

MENU: Press to access the menus of apps or screens of the Tablet.

Basic operation

Charging the battery:

Connect the Tablet to a wall outlet using the included AC adapter.



When charging, the indicator light is red and will turn off after the Tablet is fully charged (Approximately 5 hours).

Approximate play times (actual play times may vary depending on display and power settings):
- Music: up to 10 hours (Wi-Fi / backlight off)
- Video: 4 - 5 hours (Wi-Fi turned off)
- eBook: 6 - 7 hours (Wi-Fi turned off)
- Web browsing: 5 - 6 hours
- Standby time: 80 - 90 hours

Battery Tips:
- *To save power* when using the tablet, run the battery close to exhaustion and charge the Tablet for 12 hours.
- *Set the Tablet to standby mode (the display is off) to shorten charging time.*
- *To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app and shut Wi-Fi when not in use.*

Inserting a Micro SD card (not included):

Insert a Micro SD card before transferring media files.

The Tablet supports **Micro SD cards** (up to **32GB**). Since the internal memory is limited, it is important to purchase a Micro SD card to expand the memory to save audio, video and picture files.

To install a Micro SD card into the Tablet:

1. Turn off the Tablet.
2. Insert the card (face up as shown) into the card slot until it clicks and locks into place.
3. To access the Micro SD card, select "Explorer" from the Apps screen.

Unmount & remove the Micro SD card.

1. Open "Settings"
2. Select "Storage"
3. Select "Unmount Micro SD card"
4. It is now safe to remove the card from the Tablet.
5. To remove the card, gently push it in until it pops out.

- *It is strongly recommended to purchase and install a Micro SD card before transferring media files to the Tablet.*
- *A card can only be inserted one way (do not use force when inserting the card).*
- *Make sure to unmount the card before taking it out of the Tablet.*

Connecting a USB stick:

1. Insert the **"USB stick adapter"** into the USB port of the Tablet.
2. Insert the USB stick into the other end of the **"USB stick adapter"**.
3. To access the USB stick, select "Explorer" from the Apps screen.

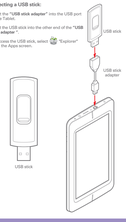

Turning on or off:

Powering on:
Press and hold the button until the lock screen appears, and slide the **"Lock icon"** to the right.

- To activate or deactivate silent mode, slide the **"Speaker icon"** to the left.
- To lock or unlock the Tablet, briefly press the button (Lock the device to conserve battery life).

Home screens

Standby:
Press and release the button for standby mode (the display will shut but the device will still be powered on - this will extend battery time).

Powering off:
Press and hold the button until the "Power off" screen appears, and select "OK" to shutdown.

You can also use the "Power widget on the Home screen or "Power" on the Apps screen to easily power off.

The Home screens are a great place to customize the Tablet by adding widgets, shortcuts or custom wallpaper.

There are five Home screens in total that may be accessed by tapping on the bottom left or right of the display as shown below.

Multimedia screen:
When the Tablet is powered on, the Multimedia screen appears, where music, pictures, video and clock may be easily accessed.

Bookmarks screen:
Tap the bookmarks tab left of the display until the Bookmarks screen appears where all the websites that are saved as bookmarks can be easily accessed.

To add or delete bookmarks, see **"Web browsing»Adding and deleting bookmarks"**.

Search screen:
Tap the search button left of the display until the Search screen appears where it is possible to easily access the Google search engine.

Power options screen:
Tap the power button right of the display until the Power options screen appears - to easily power off, turn Wi-Fi on/off, or adjust the brightness of the display.

Adding widgets or apps to the Home screen:

To customize the Home screen by adding your favorite apps or widgets, press the button to show the "Home menu" window.

Press the button to show the "Add to Home screen" window.
Select "Shortcuts", "Widgets" or "Wallpapers" from the list.
Add to Home screen window

Wallpaper:
Change the wallpaper by selecting alternate options from "Wallpapers" or your pictures from "Gallery".

Apps screen

Press the icon on the bottom of the Home screen to access the Apps screen where all the apps are stored (Swipe left on the Home screen press the icon).

When the page is full scroll up or down to access more apps.

Press the icon to return to the Home screen

Connecting to Wi-Fi

To browse the internet, use e-mail and download apps, follow the instructions below to set up Wi-Fi on the Tablet.

1. Select "Wi-Fi" in the Apps screen and select "Turn on Wi-Fi".
2. Select "Wi-Fi settings".
3. Make sure that "Network notification" is checked.
4. Select a network, and if required enter the correct password.
5. When the Tablet is connected to a network, the Wi-Fi icon displayed on the top-right bar and "Connected" will appear under the selected network.

To conserve battery life, *turn off Wi-Fi when not connected to a network.*

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the Tablet. (You must connect to Wi-Fi before accessing or setting up email accounts).

Web browsing

Select "Browser" on the Home or Apps screen (You must connect to Wi-Fi before accessing the web).

Viewing web pages:
Use the Zoom buttons which appear at the bottom right of the page when scrolling up or down to zoom in or out.

Adding and deleting bookmarks:

1. Press the "Bookmarks button".
2. Select "**Add bookmark**" to add the current website.

3. While using the web browser, press the button and select "Bookmarks" or use the Bookmarks widget on the Home screen to access your favorite, saved websites.

4. To delete a bookmark, press and hold the bookmark you wish to delete, and select "Delete bookmark" on the screen that appears.

When you add or delete a website to or from "Bookmarks", it will also be adjusted on the "Bookmarks" widget of the Home screen.

Downloading apps

To access a large library of free/paid apps and games, we recommend downloading the Amazon Appstore - follow the instructions below to download it directly to the Apps screen of the Tablet.

It is recommended to insert a Micro SD card (not included) before downloading apps.

5. Go to the "Bookmarks" widget on the Home screen, and select "Appstore" (2 Appstore links are provided - both go to the same download page).

Note: It is also possible to download the appstore by going to **www.amazon.com**, *and selecting "Appstore for Android".*

3. Select "Download now"

Multimedia

Use the Tablet to store and play music, pictures and video files. Since the internal memory is limited, insert the media files on a Micro SD card.

Music
Access music files stored on the Tablet.

Browsing files

Explorer app:
To view, move, copy or delete files on the internal memory of the Tablet, inserted Micro SD card or USB stick, select "Explorer" on the Apps screen.

1. To copy, move or delete a file or folder, press and hold until the options window appears.

eBooks

Kobo app:
Access the 2 million books (over 1million free eBooks) with the included Kobo app.

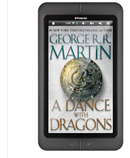

Managing apps

App Manager
Use the App Manager to optimize the performance of the Tablet by freeing up internal memory, uninstalling and terminating running apps.

Download:
Displays all the downloaded apps (these apps may be uninstalled or moved to the Micro SD card).

All:
Displays all apps installed on the Tablet (it is not possible to delete or move pre-installed apps).

On Micro SD Card:
Displays the apps that are able to be moved to the Micro SD card (the apps that are checked have already been moved).

Running:
Displays currently running apps.

Moving apps to the Micro SD card:
To free up internal memory, we recommend moving the internal memory of the Tablet, it is necessary to free the internal memory by using the "Move to SD Card" option.

1) Insert a Micro SD card into the Tablet.
2) Open the App Manager and select "On Micro SD Card".
3) Check the apps that you wish to move (the apps that have check-marks are already moved to the Micro SD card).
4) Select "Move to SD Card".

Tap Quit an app that is not functioning or responding properly.

Uninstall an app or use this option to reinstall an app that is not functioning properly.

Use this option for apps that are not functioning properly (data related to the app such as username/password may be deleted).

Clear up space on the internal memory.

ApkInstaller:
Apps that are downloaded from an app store directly to the Tablet and do not require the ApkInstaller.

In the event that you'd like to manually install an apk file directly to the Tablet, copy the apk file to the internal memory or Micro SD card, and use the ApkInstaller to find and install the app.

To install apk files that are copied directly to the internal memory of the Tablet or inserted Micro SD card, use the ApkInstaller app as shown below.

Download:
Apps that are downloaded app to find files that have been down loaded to the Tablet.

Transferring and managing files

It is possible to manage and transfer media files to the Tablet by connecting to a PC or Mac. Since the internal memory is limited, it is important to insert a Micro SD card. We strongly recommend inserting a Micro SD card - this will conserve internal memory and allow you to download more apps to the Tablet.

Connecting to a PC or Mac:
1) Connect the included USB cable to the **"USB port"** of the Tablet and USB port of the computer.

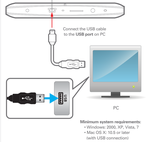

Minimum system requirements
- Windows 2000, XP, Vista, 7
- Mac OS 10.4 or later
- with USB connection

2) The "USB connected" screen appears, select "Turn on USB storage"

Note: If the "USB connected" screen does not appear when connecting the Tablet to a PC, it is possible to access it by pressing the button on the Home screen and select "Notifications" » "USB connected"

3) The **"Autoplay"** window appear on your computer's display - select **"Open folder to view files"** to manage files on the Tablet and Micro SD card (if inserted).

"ROLANDO"
(Access the internal memory)
Conserve Internal Memory!
Avoid transferring media files to "ROLANDO" (Internal memory/Tablet)
Removable Disk (K:)
"Removable Disk"
(Access the Micro SD card (if inserted)
Conserve Internal Memory!
Transfer media files to "Removable Disk" (Micro SD card)

Tip: Transfer and store media files such as music, pictures and video to the Micro SD card. Since the internal memory is limited, it is important to insert a Micro SD card to conserve the internal memory, and allow you to download more apps.

4) Copy media files to the Micro SD card (if inserted).

Tip: Organize your media (pictures, videos and music) by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below.

5) Select "Turn off USB storage" to disconnect from the computer.

Settings

Settings app:
Customize and select options to increase battery performance, Wi-Fi options, manage apps and more.

Resetting

In the event that the Tablet freezes or does not function properly, try correcting the problem by pressing the **RESET** button located on the back panel (shown below).

Use a paper clip or the tip of a stylus to press the **RESET** button. Data stored on the Tablet will not be affected by using the **RESET** button.

Note: *If the problem persists it may be necessary to restore the Tablet to the factory default settings:*

1) Select "Settings" from the Apps screen.
2) Select "Reset to factory default settings".
3) Select "factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).

Online help

Select "Online Help" on the Apps screen to access:
- New apps and updates for current apps
- Firmware updates
- Technical support
- Product registration

Legal information

FCC Part 15:
This Equipment has been tested and found to comply with the requirements for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the FCC Part 15.

R.R.P. Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating any applicable laws, we encourage the recycling of electronic products in accordance with all applicable regulations. Electronic or other governments in the area where you reside may prohibit the disposal of this product in landfills. Please contact your local authorities to determine a location where you can appropriately dispose of the product.

You may also go to WWW.RRH.COM/environment/ (www.rrhelectronics.com and reference About Electronic Recycling to learn more about the specific laws in your area and possible locations where you can recycle.

If your electronic device has internal memory in which personal or other confidential data may be stored, you may want to perform a data sanitization process before you recycle your device. Please consult your device's user manual to learn how to perform data sanitization tasks for the type of product and its software, and your may want to contact your local authorities to learn more about your options. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Limited Warranty

This product as supplied and distributed here by ACT, Inc. ("ACT") to the original consumer purchaser is warranted by ACT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). This Warranty is void if the product has been damaged by accident, unreasonable use, use while not following warranty guidelines, neglect, unauthorized service or improper handling and operation. It is also void if the product has been serviced or modified by anyone other than a service center authorized by ACT. Warranty service may be obtained by turning the product in to the place of purchase subject to or to contact the interference by one or more of the following measures:

- Provide proof of the date of purchase within the package (Dated bill of sale)
- Ship the product in its original packaging (or packaging of equal or greater protection) to the place of return.
- Include a return shipping address (no PO Box), a telephone contact number and a description of the problem with the product.
- Describe the defect or warranty claim you are returning the product.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the FCC Part 15.

R.R.P. Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating any applicable laws, we encourage the recycling of electronic products in accordance with all applicable regulations. Electronic or other governments in the area where you reside may prohibit the disposal of this product in landfills. Please contact your local authorities to determine a location where you can appropriately dispose of the product.

You may also go to WWW.RRH.COM/environment/ (www.rrhelectronics.com and reference About Electronic Recycling to learn more about the specific laws in your area and possible locations where you can recycle.

If your electronic device has internal memory in which personal or other confidential data may be stored, you may want to perform a data sanitization process before you recycle your device. Please consult your device's user manual to learn how to perform data sanitization tasks for the type of product and its software, and your may want to contact your local authorities to learn more about your options. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

IN NO EVENT WILL ACT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC (OR ITS LICENSEES) BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) ARISING OUT OF THE PRODUCT EVEN IF ACT HAS BEEN NOTIFIED THEREOF BY YOU OR ANY THIRD PARTY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support
1 (877) 998-9681 (Toll Free)
polaroid@atlantisproducts.com

Monday - Thursday: 8AM - 6PM (EST)
Friday: 8AM - 5PM (EST)

Downloads app

3. Select the Downloads app on the Apps screen.

4. Select "Amazon_Appstore-release.apk".

5. Select "Install" to install the Appstore on the Tablet.

6. The Appstore appears on the Apps screen.

Downloading and installing apps:

After downloading the Amazon Appstore, it is possible to download and install apps directly to the Tablet - these apps will appear on the Apps screen.

Select "Appstore" on the Apps screen and create an Amazon account (setting up an account is free). Once an account is created, it is easy to purchase, download and install apps directly to the Tablet.

Note: Apps compatibility / games

There are many apps available on the Amazon Appstore, but unfortunately not all apps are compatible with the Tablet. It is exclusive some of the apps are designed for mobile phones and require functions or specifications that are not supported by the Tablet. It is recommended to read reviews of the app or try a free version of an app and testing it before purchasing the paid app.

**Avoid apps that require camera or GPS as these apps will not be supported by the Tablet.*

The Tablet supports many game apps - although we recommend always testing the free version if available before purchasing.

To purchase and wirelessly download music to the Tablet, install the Amazon MP3 app.

Note: It is recommended to insert a Micro SD card before downloading music or apps to the Tablet.



1. Open the Appstore and select **"Amazon MP3"**.

2. Select **"free"**.



3. Select **"install"** to download the app installer.

4. Select **"install"** to install the app on the Tablet.

5. The app is installed and will appear on the Apps screen.

Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon, Amazon appstore, and the Amazon MP3 app - we simply recommend their app store over the other available options because of the wide selection of available apps, user experience, and customer service.

Note: The Amazon appstore is available free to download at www.amazon.com

Settings

3. If you select "Copy" or "Move", use the "Home" or "Previous" buttons to navigate to the destination folder, then move the file or folder to, and press "Edit»" and select "Paste".

FRONT

BACK